

Eastern Garage Doors – B&D Remote Setup

Before you start

- Make sure you can reach the motor unit (ladder may help).
- Have the new remote ready.
- The door/gate should be stopped and not moving.

Program a new remote (B&D)

1. Choose your button
2. On the new remote, press and hold the button you want to use.
3. Teach the motor
4. While still holding that button, press and release the CODE SET button on the motor.
5. → The CODE SET light will flash to confirm it learned the remote.
6. Finish & test
7. Release the remote button, then press it once to test the door/gate.

Erase all remotes (factory clear)

⚠ This clears every remote from the motor. You can't delete just one.

For Garage Motors

1. Press and hold the CODE SET button for 8–15 seconds.
2. The light will start flashing to show codes are erased.
3. Keep holding until the motor stops flashing/beeping, then release.
4. Test to confirm no remotes work.

For Gate Motors

1. Press and hold the CODE SET button until the red LED turns off.
2. Release the button.
3. Test to confirm no remotes work.

Quick tips

- Not working? Move closer to the motor and try again.
- Replace the remote battery if the LED is dim or unresponsive.
- After an erase, you'll need to re-program any remotes you want to keep.